Model Specifications

Model	ABW 4	ABW 8	ABW 16	ABW 32
CAPACITY	9lb / 4kg	18lb / 8kg	35lb / 16kg	70lb / 32kg
READABILITY	0.001lb / 0.5g	0.002lb / 1g	0.005lb / 2g	0.01lb / 5g
PAN SIZE	9.6x7.1" / 245x180mm			11.8x8.3" / 300x210mm
WEIGHING UNITS	g, kg, lb, oz, lb:oz			
HOUSING	ABS plastic			
DISPLAY	LED with 0.8" / 20mm-high digits			
POWER SUPPLY	12VDC 800mA adapter, Internal rechargeable battery			
DIMENSIONS	10.0x11.4x4.1" / 255x290x105mm			11.8"x12.2"x4.1" / 300x310x105mm
NET WEIGHT	5.5 lb / 2.5kg			5.54 lb / 2.51kg

Visit our website for more product information!





www.adamequipment.com





About Adam Equipment

For nearly 50 years, professionals worldwide have relied on Adam Equipment for an extensive selection of dependable and affordable weighing equipment. Adam is a leading designer and manufacturer of analytical, semi-micro and precision balances, scales and moisture analyzers for the lab, education, industrial, food, medical, legal cannabis, veterinary and jewelry markets worldwide.


Combining the best in form and function, our products offer intuitive operation, dependability, performance and value to facilitate everyday work and simplify complex applications.

Headquartered in the United Kingdom, Adam also operates offices and distribution centers in the United States, South Africa, Australia, China and Germany to provide product support and speedy delivery to distributors worldwide.



WASHDOWN SCALES

Adam Equipment follows a policy of continuous improvement and reserves the right to change specification and pricing without notice. Adam Equipment's standard terms and conditions of sale apply. Errors and omissions excepted.

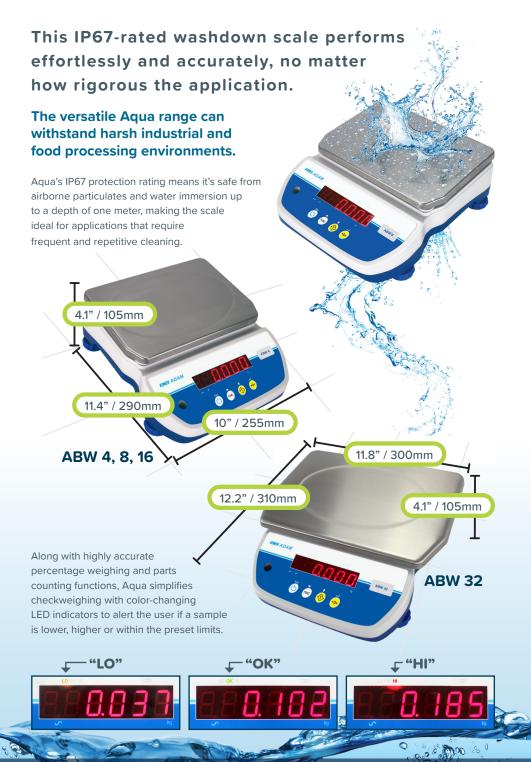

SOLID CONSTRUCTION

A durable ABS housing, stainless steel pan, sealed keypad and an IP67 rating allow Aqua to withstand the most demanding industrial environments and keep going after a quick washdown.

Strategically placed channels in the housing and a sealed internal design protects Aqua's components from water penetration. For stability, Aqua features heavy-duty height adjustable rubber feet.

STAINLESS STEEL PAN

Aqua offers models with two generously-sized stainless steel pans:

- 9.6" / 245mm x 7.1" / 180mm
- 11.8" / 300mm x 8.3" / 210mm for larger, heavier loads of up to 70lb / 32kg

The molded sub pan accommodates two sizes of weighing scoops.

INTUITIVE DISPLAY

- Front- and rear-facing 20mm LED displays allow two users to share a single scale for increased productivity
- Color-coded checkweighing LED lights for at-a-glance results
- Sleek, simplified keypad hides indicators until needed for a clutter-free display

EASILY ACCESSIBLE POWER

Use the included AC adapter or take the compact Aqua on the go with its internal rechargeable battery, which offers up to 55 hours of continual use. An auto power-off function conserves battery life for uninterrupted operation.

When using the battery, the AC connector is protected by a plug to prevent water damage during washdown. The battery cover opens for easy access should it need to be replaced.



















WEIGHING · PERCENTAGE WEIGHING

PARTS COUNTING . CHECKWEIGHING