




With ABS plastic construction and stainless steel top pan, the easy-to-clean Swift scale provides an ideal weighing solution for retail operations. The Swift features multiple currency capability and can output data in different languages. Well-suited for deli or catering use, the Swift contains a highly visible backlit LCD to show weight, unit price and total. A rear display mounts on a pillar or on the back of the scale, allowing customers to view and verify totals. For efficient customer service, Swift can store up to 100 of the most popular products and recall them with a few key strokes. To help maintain cleanliness, specially designed drip channels beneath the pan help divert spills. An RS-232 interface or optional USB offer connection to computers and printers, allowing rapid data transmission. The Swift's rechargeable battery and auto power-off feature make this scale an excellent choice for market stands.

Simple and stylish for fast price computing in a retail setting

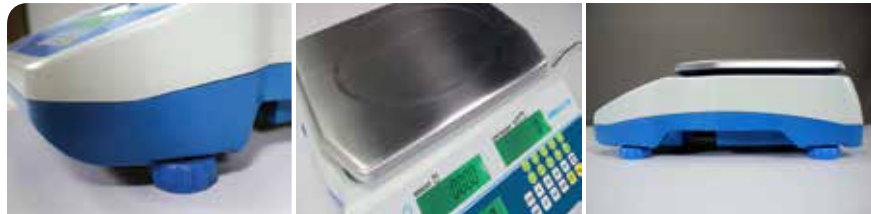

Features

- Backlit LCD shows weight, unit price and total price, to provide the key information simultaneously
- Rear display mounted on a pillar or back of the scale lets customers see key data
- Adjustable levelling feet help optimise setup
- Colour-coded keys facilitate quick recognition of the most frequently used buttons
- RS-232 interface is available to provide speedy connection to computers and printers
- Optional USB interface simplifies data communication
- Overload protection helps prevent damage to internal components
- Drip channels help divert spills away from the scales internal components
- Auto-clear function
- Product look up (PLU) memory locations store a range of items for recall
- Preset tare function speeds the process of repetitive weighing
- Zero-tracking feature ensures display returns to zero reading
- Available in multiple currencies
- EC type approved
- Rechargeable battery included for operation almost anywhere
- The auto power-off feature conserves battery life

Applications

- Weighing
- Price computing

About ADAM:

For nearly 50 years, professionals worldwide have relied on Adam Equipment for an extensive selection of dependable and affordable weighing equipment. Adam provides the right balance of speed, performance and value.

Product Details

Model	SWZ 3D	SWZ 6D	SWZ 15D	SWZ 30D	SWZ 3DP	SWZ 6DP	SWZ 15DP	SWZ 30DP
Capacity	1.5kg / 3kg	3kg / 6kg	6kg / 15kg	15kg / 30kg	1.5kg / 3kg	3kg / 6kg	6kg / 15kg	15kg / 30kg
Readability	0.5g / 1g	1g / 2g	2g / 5g	5g / 10g	0.5g / 1g	1g / 2g	2g / 5g	5g / 10g
Repeatability (S.D.)	1g / 2g	2g / 4g	4g / 10g	10g / 20g	1g / 2g	2g / 4g	4g / 10g	10g / 20g
Linearity (+/-)	1.5g / 3g	3g / 6g	6g / 15g	15g / 30g	1.5g / 3g	3g / 6g	6g / 15g	15g / 30g
Pan Size	210x300mm							
Weighing Units	g, kg							
Stabilisation Time (sec.)	2							
PLU Memories	100							
Interface	RS-232, Optional USB							
Calibration	N/A							
Display	Backlit LCD with 15mm-high digits							
Pillar Mounted Display	No				Yes			
Power Supply	12V 800mA adaptor / Internal rechargeable battery							
Operating Temperature	-10° to 40°C							
Housing	ABS plastic							
Overall Dim. (WxDxH)	315x355x115mm				315x355x115mm			
Net Weight	3.29kg				3.29kg			
Approvals	EC type approved							

Accessories

Item number	Description
3074010267.....	USB cable
3022013912.....	Hard carrying case with lock
3022013911.....	In-use cover
1120011156.....	ATP thermal printer
3014011014.....	RS-232 cable M-F
303149759.....	Vegetable Scoop (complete with fitting to scale)
303149760.....	Confectionery Scoop (complete with fitting to scale)
600002028.....	AdamDU Data Collection Program
700660290.....	Calibration certificate
1120014641.....	AIP impact printer
2020013915.....	USB option

Key Accessories



Scoops

Metal scoops are designed to make portioning and food measurement easy. Available in both small and large sizes.

Supplied By